

The purpose of this Quick Reference Guide is to familiarise the driver with the layout of the vehicle controls.

### **Vehicle Security**

See Security System Handbook.

### **Sound System**

See Sound System Handbook.

### **Climate Control**

See Driver's Handbook, Section 5.

### **Underbonnet Servicing**


See Vehicle Care Handbook, Section 3.

### **Wheel Changing and Jacking**





See Vehicle Care Handbook, Section 4.

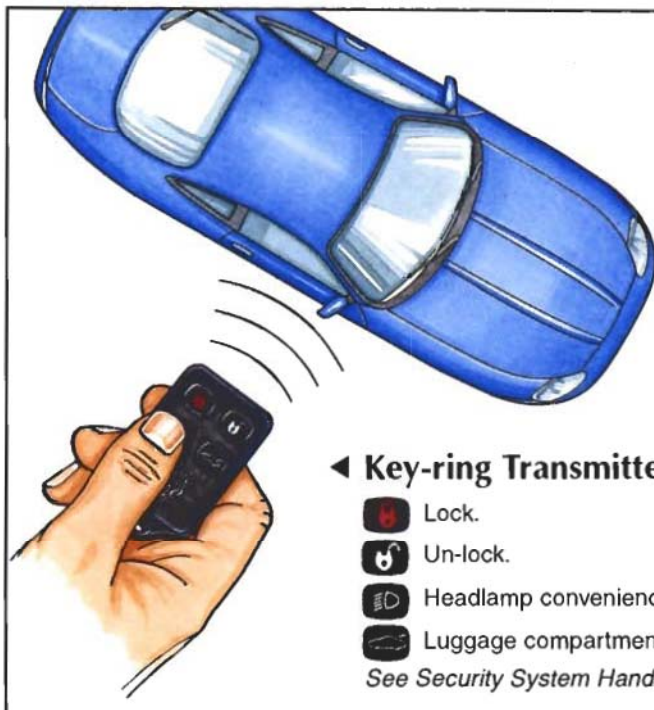**QUICK GUIDE**






### ◀ Key-ring Transmitter

-  Lock.
-  Un-lock.
-  Headlamp convenience.
-  Luggage compartment release.


See Security System Handbook

### Ignition/Starter ▶ Switch


See page 56.

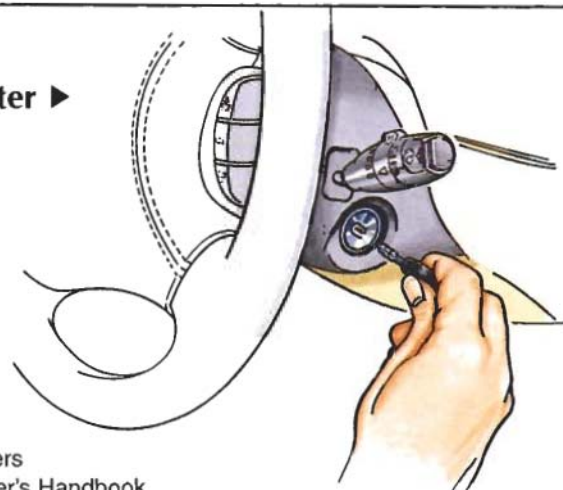

Page numbers  
refer to Driver's Handbook

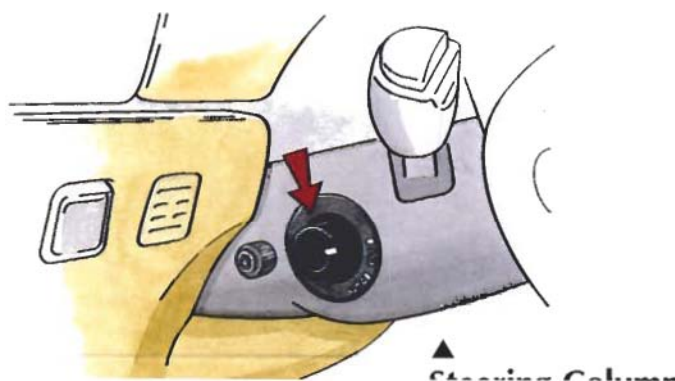


▶ Steering Column

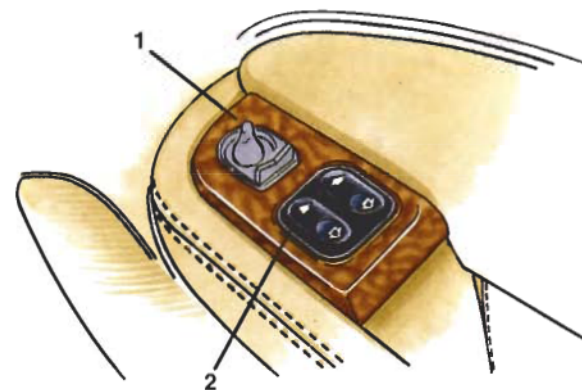

### ▶ Door Switch Pack


- 1 Door mirror adjustment switch. See page 52.
- 2 Window operation switches. See page 32.

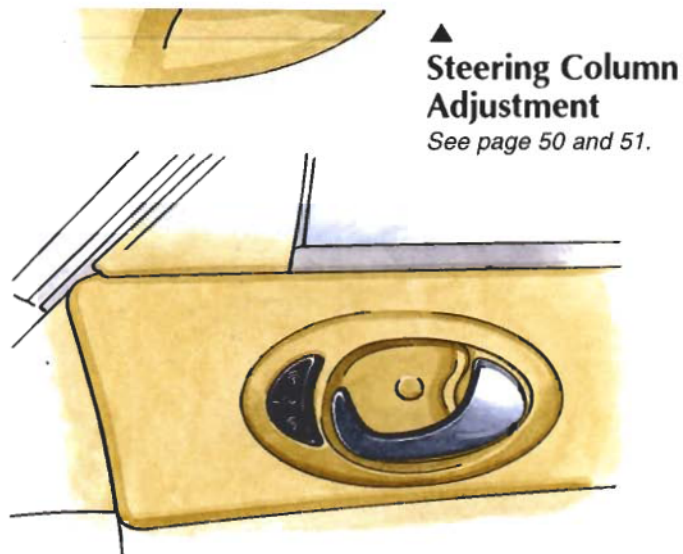

▲ **Steering Column Adjustment**  
See page 50 and 51.

▲ **Driving Position Memory Buttons**  
See page 49.

2 Window operation switches. See page 32.

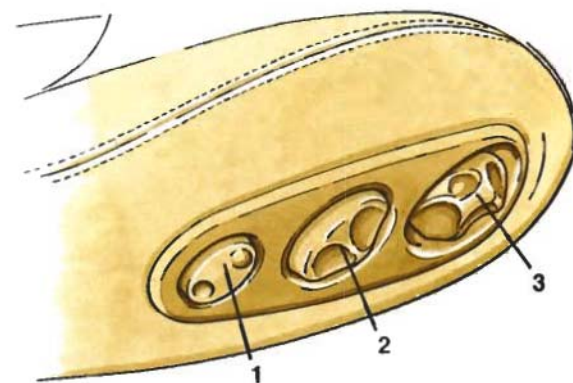

▲ **Seat Adjustment Switches** See page 47.


- 1 Lumbar support.
- 2 Seat back.
- 3 Seat cushion.



◀ **Front Seat Belt Height Adjustment**  
See page 64.

**Front Seat Back Tilt** ▶  
See page 48.



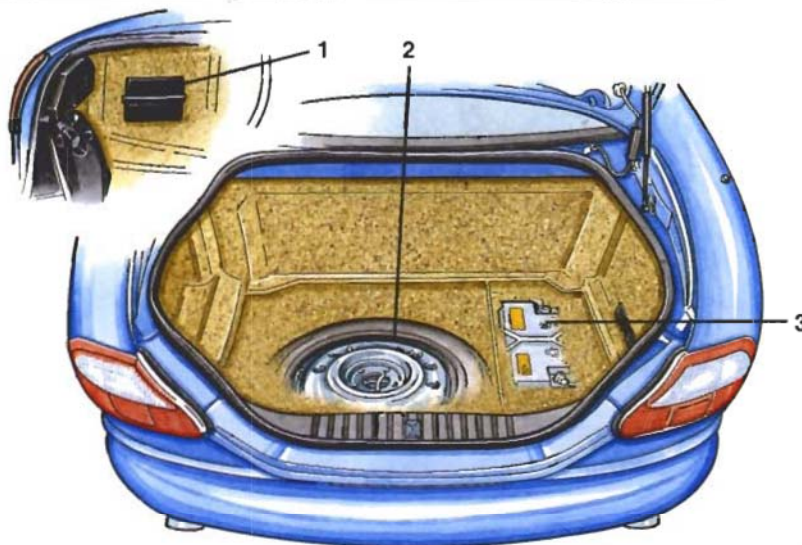

### ◀ Luggage Compartment Layout

- 1 Literature pack which includes Security and Vehicle Care Handbooks.
- 2 Spare wheel and wheel changing equipment.  
*See Vehicle Care Handbook page 28.*
- 3 Battery. *See Vehicle Care Handbook page 58.*

### Tyre Pressures

See inside the front cover of the Driver's Handbook, page 79 in the Vehicle Care Handbook and the tyre recommendation label in the centre console storage compartment.


Note your recommended tyre pressures in the boxes.

Normal

|       |      |
|-------|------|
|       |      |
| Front | Rear |

Maximum comfort

|       |      |
|-------|------|
|       |      |
| Front | Rear |

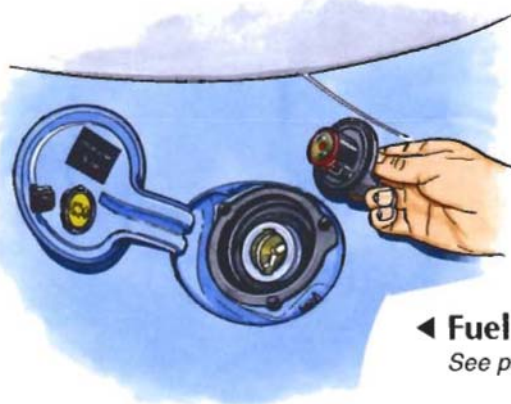

### ◀ Fuel Filler

*See page 58.*



### ▲ Fuses


*See Vehicle Care Handbook page 40.*

### Bulb Changing ▶

*See Vehicle Care Handbook page 61.*






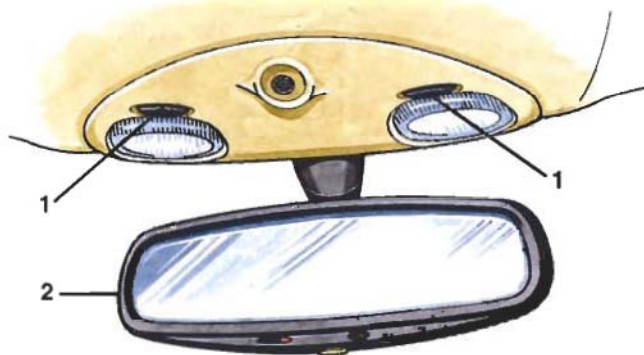

## Instruments and Controls

- 1 Map light switch. *See page 38.*
- 2 Interior rear view mirror. *See page 54.*

- 3 Driver's airbag and horns. *See page 62 and 41.*
- 4 Sound system controls. *See Sound System Handbook.*
- 5 Exterior lighting, direction indicator and trip cycle switches. *See page 35, 35 and 23.*
- 6 Trip computer switches. *See page 24.*
- 7 Instrument pack and warning lights. *See page 12.*
- 8 Message centre display. *See page 15.*
- 9 Windscreen wipers and washers, headlamp power wash switches. *See page 40 and 41.*
- 10 Fuel flap release switch. *See page 58.*
- 11 Luggage compartment remote release switch. *See page 46.*

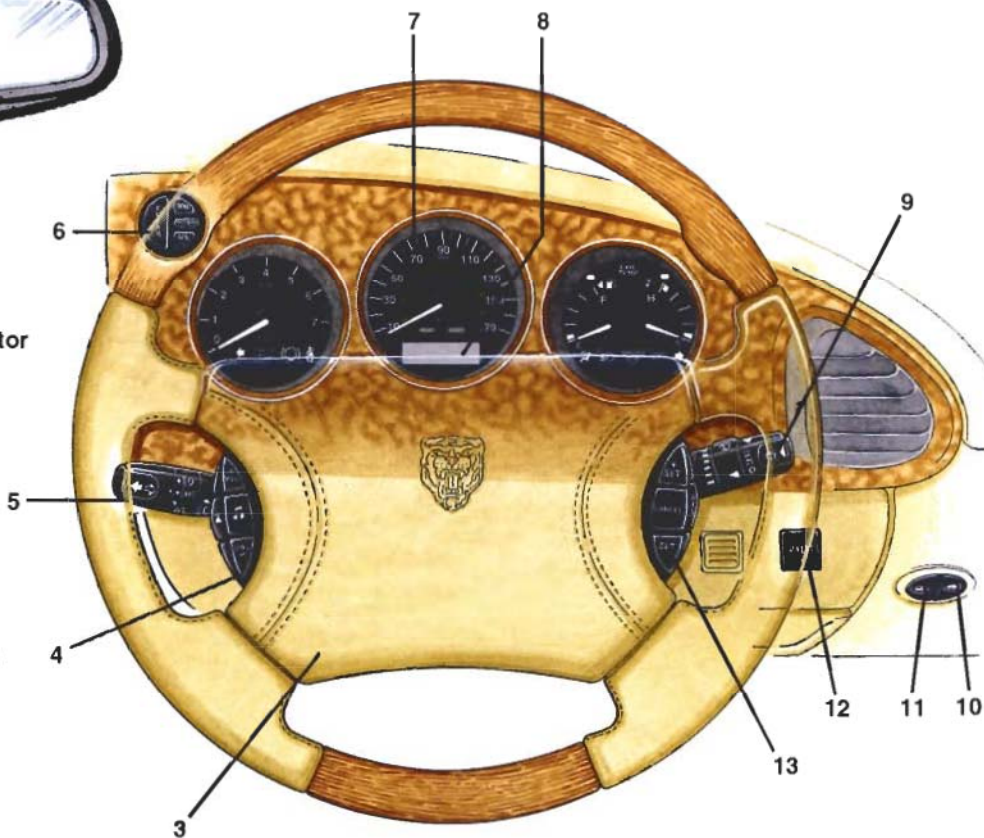

- 12 Valet switch.  
*See page 46.*
- 13 Cruise control switches.  
*See page 29.*
- 14 Instruments and warning lights.  
*See page 13.*
- 15 Hazard warning switch.  
*See page 37.*
- 16 Front seat heater switch.  
*See page 48.*
- 17 Automatic stability or traction control switch.  
*See page 31.*
- 18 Sport mode switch.  
*See page 27.*
- 19 Cruise control master switch.  
*See page 29.*
- 20 Roof switch (convertible only).  
*See page 92.*
- 21 Radio cassette player.  
*See Sound System Handbook.*
- 22 Rear fog lamps switch.  
*See page 37.*
- 23 Front fog lamps switch.  
*See page 37.*
- 24 Headlamp levelling switch.  
*See page 37.*
- 25 Heated front screen switch.  
*See page 82.*
- 26 Heated rear screen switch.  
*See page 82.*

Page numbers refer to Driver's Handbook.

For more in-depth information the driver should study the Driver's Handbook, with particular reference to all **WARNINGS** and **Cautions**.

